 


Competition Lazy Kate

For single & double drive, standard & jumbo bobbins

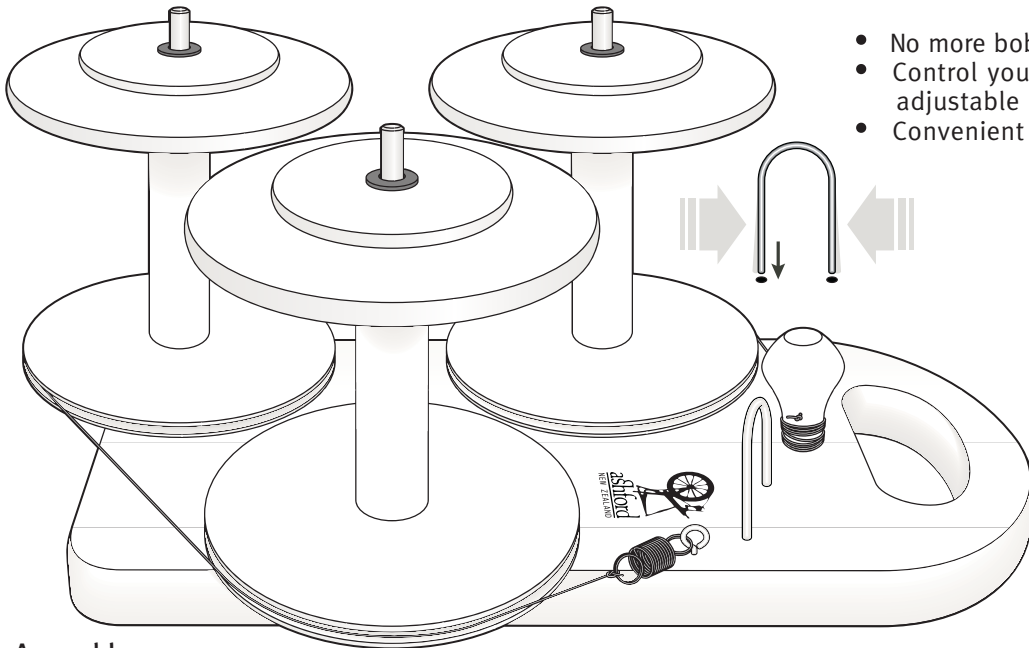

- No more bobbin over-wind when plying at speed!
- Control your bobbins when plying with the adjustable brake tension.
- Convenient carry handle.

Bobbins not included

Assembly

1. Place the steel rods in the three holes.
2. Squeeze the metal yarn guide and insert into holes.
3. Tie one end of the nylon brake band to the tension spring and thread the other end through the hole in the wooden tension knob and tie a knot. Insert the tension knob into the hole.
4. Thread the screw eye (with the tension spring attached) into the hole.

 
Your Competition Kate is ready to use.

Here's how


1. Place bobbins onto the rods.
2. Place the nylon brake band in the bottom groove in the bobbin ends.
3. Adjust the tension of the brake band by twisting the tension knob.
4. Take the yarn from each bobbin (two or three), thread through the metal yarn guide and attach to an empty bobbin on your spinning wheel.
5. You can ply with the Competition Lazy Kate on the floor or on a table beside you.

Happy Spinning!


Spinning Wheels from Ashford

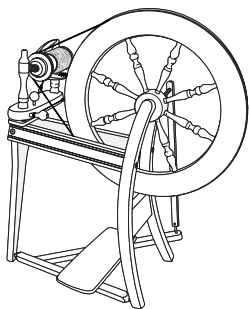


Traditional

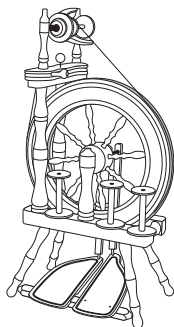 

Traveller

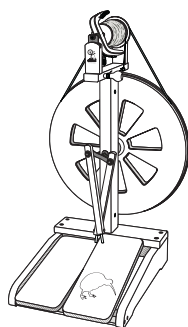 

Kiwi

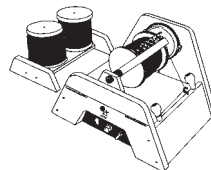 

Electronic



Joy



Elizabeth 2

Ashford Handicrafts Ltd.
 Factory and Showroom: 415 West Street,
 PO Box 474, Ashburton, New Zealand
 Telephone 64 3 308 9087
 Facsimile 64 3 308 8664
 Email: sales@ashford.co.nz
 Internet: www.ashford.co.nz

Ashford Guarantee
 Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture we will replace the item. To validate our guarantee please register on our website or write to us.
 Please also join our Ashford Club for the Wheel Magazine, competitions and more at www.ashfordclub.co.nz