



JOY 2 SPINNING WHEEL SINGLE & DOUBLE TREADLE WITH A SLIDING HOOK FLYER

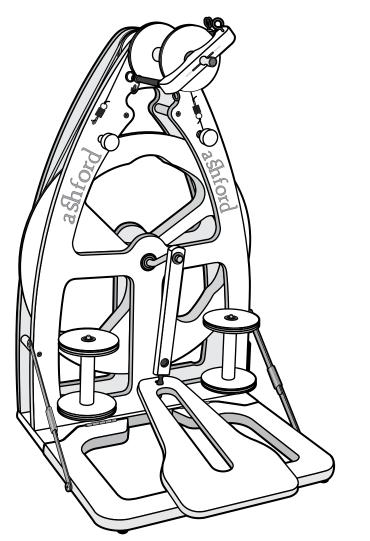

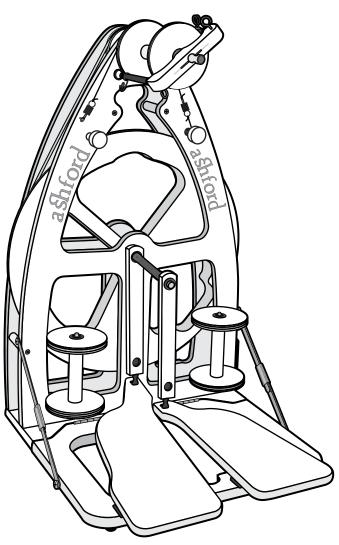

JASW251119V9

Ashford Handicrafts Limited


Factory and Showroom: 415 West Street PO Box 474, Ashburton 7700 New Zealand Telephone 64 3 308 9087 Facsimile 64 3 308 8664 Email: sales@ashford.co.nz Internet: www.ashford.co.nz

Ashford Guarantee


Thank you for purchasing this Ashford product. In the unlikely event there is any fault in manufacture we will replace the item. To validate our guarantee please visit our website or write to us.

ASSEMBLY INSTRUCTIONS FOR JOY 2 SPINNING WHEEL SINGLE & DOUBLE TREADLE WITH A SLIDING HOOK FLYER

Your Joy 2 spinning wheel has been lacquered prior to assembly. If desired, the application of Ashford Wax Finish may further enhance its appearance.

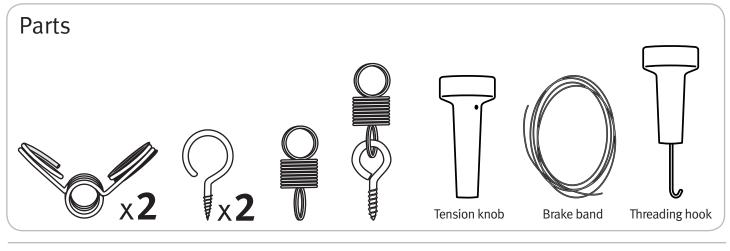


Disengage the latch. Note: The screw on the treadle board has been tightened for shipping. Loosen the screw, fold the treadle board down and lock the metal stays into position. Slide the clear sleeves over the joint to secure the metal stays.

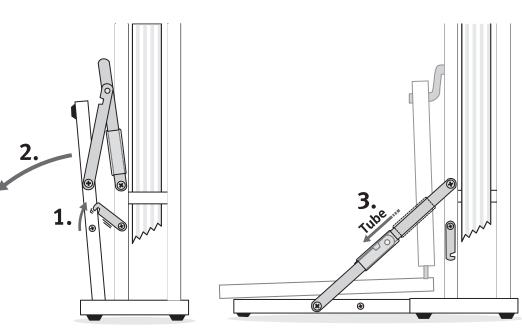




1

 
Thread the 2 hooks into the pilot holes in the flyer base. Squeeze and slide the stainless steel yarn guides onto the flyer arms.



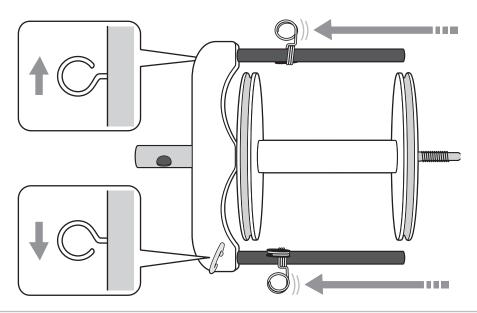




Cut 40cm (16in) off the brake band. Tie one end to the spring attached to the screw eye and the other to the second spring so that you have $27cm (10^{3}/4in)$ between the 2 springs (See side of this page). Tie one end of the surplus nylon to the second spring, and thread the other end through the tension knob and tie a knot. Trim off surplus nylon.

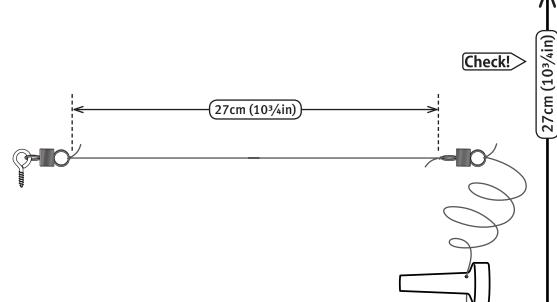





Thread the screw eye with the brake band spring attached into the hole in the front frame.

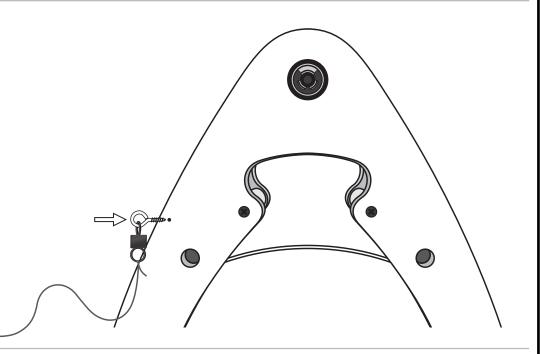




Apply a drop of oil to the flyer spindle and slide the bobbin on. Ashford spinning oil is ideal for this purpose. Thread the flyer spindle into the top shaft. Hold the flyer whorl with one hand and rotate the flyer clockwise with the other. Tighten firmly.

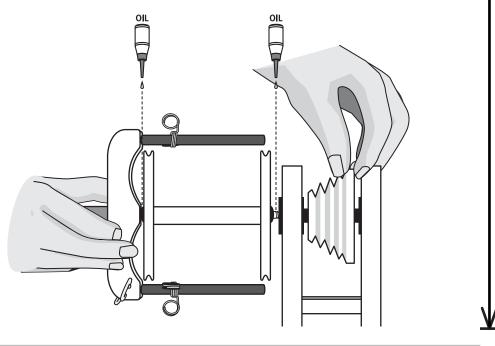

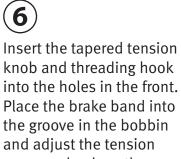



knob so the springs only just begin to stretch.

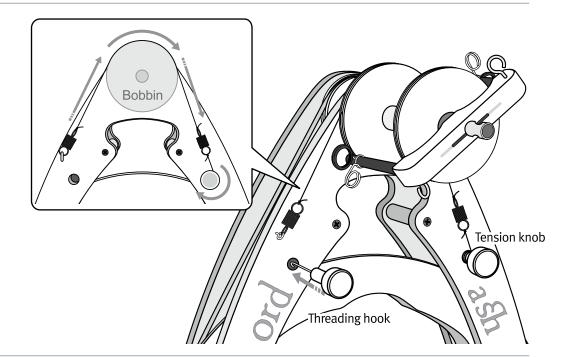

7


Locate the two spare bobbins onto the bobbin holders in the front frame. When plying or spinning bring the bobbins forward. Push them back before folding the treadle up.

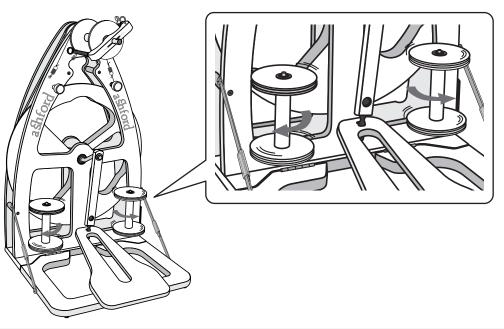

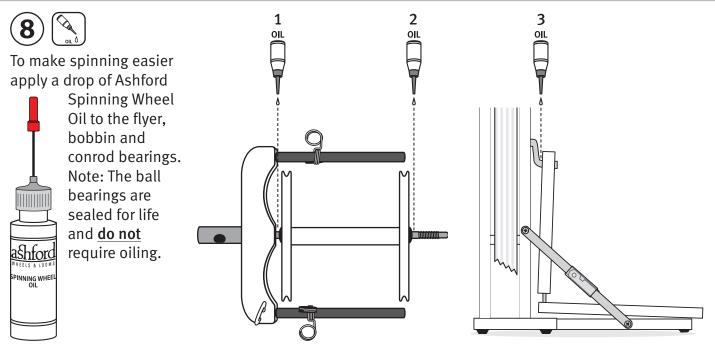

Ratio


Position the stretchy drive cord around the smallest grove in the wheel and then over the largest flyer whorl. This gives a flyer to wheel ratio of 6:1. The other ratios are 8, 11 & 14:1. When changing ratios ensure the drive cord directly aligns the wheel and flyer whorl. When spinning coarse fibres or thick yarns use the slowest flyer speed of 6:1. For fine fibres and yarns use a higher ratio.

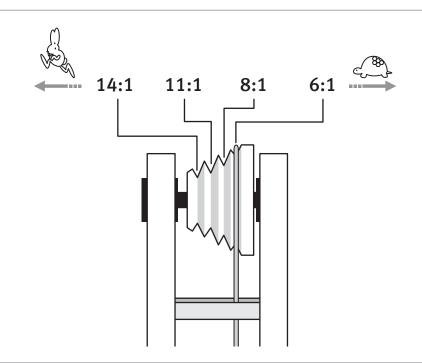

Folding up your Spinning Wheel 1. 2. 5. 9.

8.

4. Double treadle only

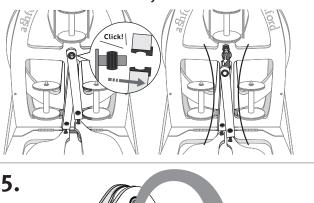




Always carry it by the built in handle or in the optional carry bag. Do not carry it by the flyer which could bend if handled roughly.

Joy carry bag

You are now ready to start spinning


Step 1

Tie a piece of yarn called a leader, approx. 1m (1yd) long, on to the bobbin. Thread it through the yarn guide, around the flyer hook on the **right-hand side of the flyer** and out through the orifice.

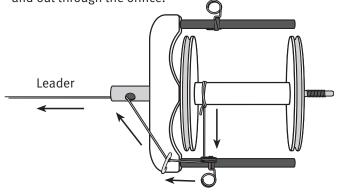

Step 2

Adjust the tension knob so that the brake band springs are only just starting to extended. Too much tension will make treadling harder.

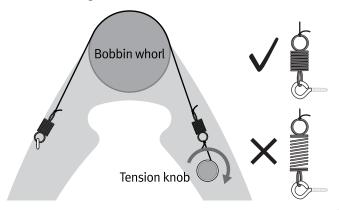

Step 3

Sit in a comfortable position. A straight back Ashford Spinning Chair is ideal. On the single treadle Joy 2, treadle with either foot or both together.

Step 4

The wheel is weighted so the crank will always come to rest in the 1 o'clock position. To start spinning just push down with your foot. Practice treadling slowly clockwise.

Step 5


Join your prepared fibres onto the leader. Now you are spinning singles. Treadle slowly.



Step 6

To ply two singles together, place two bobbins of single ply yarn on the two bobbin storage pins. Tie these two yarns onto the leader. Treadle the wheel anticlockwise.


For further spinning information refer to "The Ashford Book of Hand Spinning", a 116 page book full of ideas and inspirations for spinners.

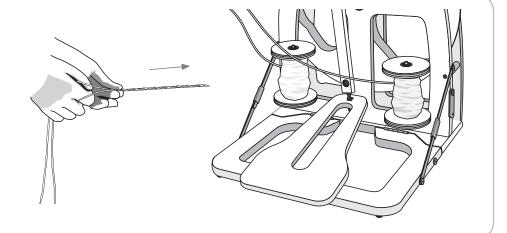



Maintenance

Replacing a broken or worn drive belt

- **1.** Take these 10 screws out.
- **2.** Slide new band in place.

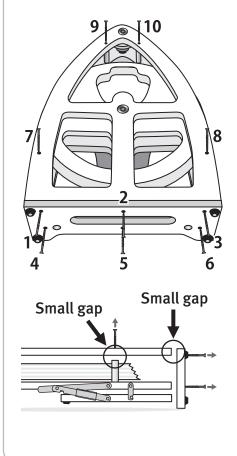


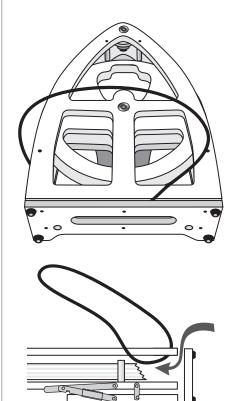


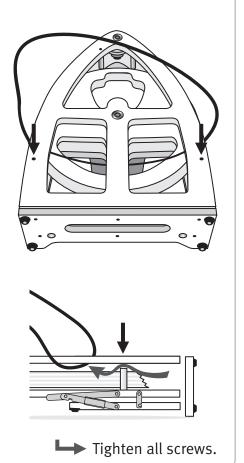

Memo

  How to insert the polyurethane conrod joints into the conrod. *This has been pre-assembled in the factory.





More Information



How-to videos on You Tube

Watch our how-to videos on You Tube. www.youtube.com/user/AshfordHandicrafts



Facebook

Join us on facebook. www.facebook.com/ashford.wheels.looms



The Wheel Magazine

Ashford's annual fibrecraft magazine. Spinning, weaving, felting, dyeing and knitting projects, patterns and articles from around the world. To receive the glossy version delivered to you, subscribe at:

www.ashford.co.nz/subscribe



Ashford Handicrafts Limited

Factory and Showroom: 415 West Street PO Box 474, Ashburton 7700 New Zealand Telephone 64 3 308 9087 Facsimile 64 3 308 8664 Email: sales@ashford.co.nz Internet: www.ashford.co.nz